


Gene Expression with the 192.24 IFC Using Standard TaqMan Assays

For more information, see the Real-Time PCR Analysis User Guide (PN 68000088) and the Juno System User Guide (PN 100-7070).

NOTE Pre-amplification of samples is required. See Fluidigm Gene Expression Specific Target Amplification Quick Reference (PN 68000133) for more detail.

Review Juno/IFC Controller RX Workflow

Load	Thermal-cycle (PCR) and image
Juno™ or RX	Biomark™ HD or Biomark

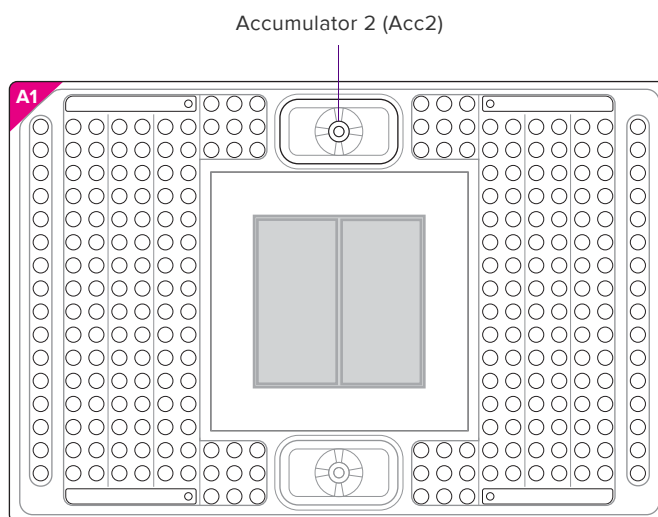

Prepare the 192.24 Dynamic Array IFC

⚠ IMPORTANT

- Use the 192.24 Dynamic Array™ integrated fluidic circuit (IFC) within 24 hours of opening the package.
- Due to different accumulator volumes, use only syringes with 150 µL of control line fluid.
- Control line fluid on the IFC or in the inlets makes the IFC unusable.

- 1 Inject control line fluid into accumulator 2 (Acc2) on the IFC.
- 2 Remove and discard the blue protective film from the bottom of the IFC.

Prepare 10X Assays

- 1 In a DNA-free hood, prepare aliquots of 10X assays using volumes in the following table. Scale up appropriately for multiple runs.

Component	Vol. per inlet (µL)	Vol. per inlet with overage (µL)	Vol. for 50 µL stock
20X TaqMan® Gene Expression Assay (Life Technologies)	1.5	2.0	25.0
2X Assay Loading Reagent (Fluidigm PN 100-7611) ●	1.5	2.0	25.0
Total	3.0	4.0	50.0

Final concentration (at 10X): primers, 9 µM; probe, 2 µM

Prepare Sample Pre-Mix and Samples

- 1 Combine components in the following table to make sample pre-mix and final sample mixture. Scale up appropriately for multiple runs.


Component	Vol. per inlet (µL)	Vol. per inlet with overage (µL)	Sample pre-mix for 192.24 with overage* (µL)
SAMPLE PRE-MIX			
TaqMan Universal PCR Master Mix (2X) (Life Technologies PN 4304437)	1.5	2.0	480.0
20X GE Sample Loading Reagent (Fluidigm PN 100-7610) ●	0.15	0.2	48.0
Pre-amplified cDNA†	1.35	1.8	—
Total	3.0	4.0	—

*240 reactions for ease of pipetting

†For more information about PreAmp treatment, see Gene Expression PreAmp with Fluidigm PreAmp Master Mix and TaqMan Assays Quick Reference (PN 100-5876).

- 2 In a DNA-free hood, combine the TaqMan Universal PCR Master Mix with the GE Sample Loading Reagent in a 1.5 mL sterile tube—enough volume to fill an entire IFC. 2.2 µL of this sample pre-mix can then be aliquoted for each sample.
- 3 Remove these aliquots from the DNA-free hood and add 1.8 µL of cDNA to each, making a total volume of 4 µL in each aliquot.

192.24 IFC Pipetting Map

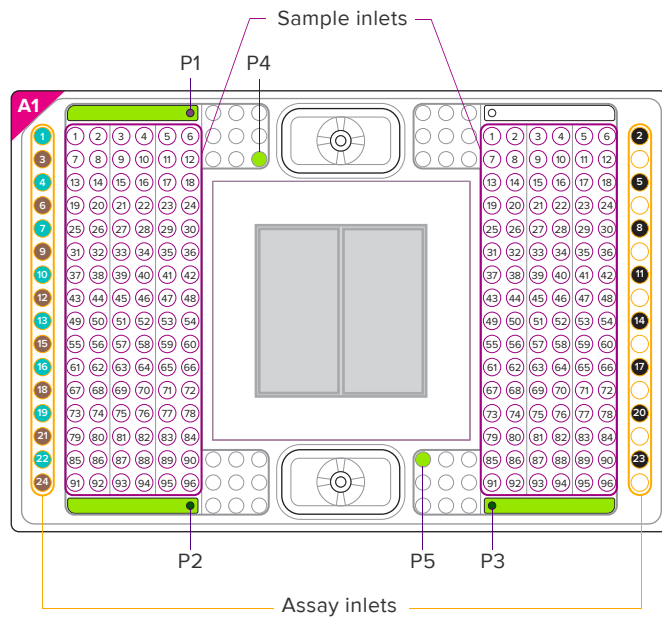

Load the IFC

⚠ IMPORTANT

- Vortex thoroughly and centrifuge all assay and sample solutions before pipetting into IFC inlets. Failure to do so may result in a decrease in data quality.
- While pipetting, do not go past the first stop on the pipette. Doing so may introduce bubbles into inlets.
- For unused assay inlets, use 2.0 μ L assay loading reagent and 2.0 μ L of water per inlet.
- For unused sample inlets, use 2.2 μ L of sample pre-mix and 1.8 μ L of water per inlet.

- 1 Pipet 3 μ L of each assay and 3 μ L of each sample into the respective inlets on the IFC (see the 192.24 IFC pipetting map).
- 2 Pipet 150 μ L of Actuation Fluid ● into the P1 well on the IFC.
- 3 Pipet 150 μ L of Pressure Fluid into the P2 and P3 wells on the IFC.
- 4 Pipet 20 μ L of Pressure Fluid into the P4 and P5 wells on the IFC.
- 5 Blot the carrier surface with a dry, lint-free cloth.
- 6 Place the IFC into the instrument and run the load script:
 - Juno: **Load Mix 192.24 GE**
 - RX: **Load Mix (169x)**

- ⚠ **IMPORTANT** Start IFC run within 1 hour of loading samples.

Collect Real-Time PCR Data

- 1 Remove any dust particles or debris from the IFC surface with clear tape.
- 2 Double-click the **Data Collection** icon on the desktop.
- 3 Click **Start a New Run**.
- 4 Ensure that the status indicators for the lamp (Biomark only) and the camera are green.
- 5 Place the loaded IFC into the Biomark HD or Biomark.
- 6 Choose project settings (if applicable). Click **Next**.
- 7 Click **Load**.
- 8 Verify IFC barcode and IFC type.
- 9 Choose project settings (if applicable). Click **Next**.
- 10 Provide a name and select a file storage location for a new IFC run, or browse to select a predefined run file. Click **Next**.
- 11 Choose the application, reference, and probes:
 - a Application type: **Gene Expression**
 - b Passive reference: **ROX**
 - c Assay: **Single probe**
 - d Probe type: **FAM-MGB**
 - e Click **Next**.
- 12 Browse to and choose the thermal protocol: **GE 192x24 Standard v1.pcl**
- 13 Confirm **Auto Exposure** is selected. Click **Next**.
- 14 Verify IFC run information.
- 15 Click **Start Run**.

For technical support visit fluidigm.com/support

EMAIL **United States** techsupport@fluidigm.com | **Europe** techsupport@fluidigm.com
Asia techsupportasia@fluidigm.com | **Latin America** techsupportlatam@fluidigm.com
All other countries techsupport@fluidigm.com

PHONE **United States (toll-free)** +1 866 358 4354 | **Europe** +33 160 92 42 40
Japan +81 3 3662 2150 | **China (excluding Hong Kong)** +86 21 3255 8368
All other countries +1 650 266 6100

For Research Use Only. Not for use in diagnostic procedures.

Information in this publication is subject to change without notice. Use standard laboratory safety protocols. **Safety data sheet information** fluidigm.com/sds **Patent and license information** fluidigm.com/legal/notice **EU's WEEE directive information** fluidigm.com/compliance | Fluidigm, the Fluidigm logo, Biomark, Dynamic Array, and Juno are trademarks or registered trademarks of Fluidigm Corporation in the United States and/or other countries. All other trademarks are the sole property of their respective owners.
 © 2015 Fluidigm Corporation. All rights reserved. 06/2015